TREE HANDLER



EDGE® TREE HANDLER

Landscape professionals and nurserymen can transform their compact equipment into useful and profitable tools for tree and shrubbery planting, transplanting and removal with the EDGE tree handler.

OPERATIONAL BASICS

Upgrade from using forks and you'll never go back! Use the EDGE tree handler attachment to load and unload trees, transport and plant nursery stock. It can also be handy for moving and placing boulders. Forks up to 72" (1828 mm) will carry loads up to 2,000 lbs (1360 kg). Use it for balled and burlap-ed trees up to 50" (1270 mm), boxes up to 36" (914 mm) and pots up to 65 gallons (246 L).



SPECIFICATION

| Model | Weight (Ibs/kg) | Ball Dia. (in/mm) | Tine Length (in/mm) | Max. Opening (in/mm) |
|-------|-----------------|-------------------|------------------------|-------------------------|
| NJII | 700/318 | 50/1270 | 72/1829 | 66/1676 |
| NJPP | 950/431 | 60/1524 | 80/2032 | 41/1041 |

FEATURES

- Handle balled and burlap-ed trees up to 50" (1270 mm) and pots up to 65 gallons (246 L)
- Heavy-Duty 72" (1829 mm) forks with 6" (152 mm) wide tread plate face
- Adjustable padded tree guard standard

| | Radial Skid Loaders | | | | | Vertical Skid Loaders | | Track Loaders | | | Articulated Loaders | | | | | | |
|---|---------------------|---|---|---|---|-----------------------|---|---------------|---------------|---|---------------------|---|---|---|-----|-------------|---|
| Machine Compatibility Gehl / Mustang | 3640E/ 2026 | | | | | | | | V330 3300V | | RT175/ 1750RT | | | | 540 | 650/ 608 | |
| *Tree Handler | • | • | • | • | • | • | • | • | • | * | • | • | • | ٠ | ٠ | ٠ | • |

*Note: Machine compatibility is based on operating capacity of the machine and the weight of the attachment

